

TACTILETAXI



braille and tactile taxi signs

FITTING GUIDE

STEP 1

- > Ensure the area of the vehicle “forward of the door handle” is clean.
- > Use “isopropyl” rubbing alcohol to prepare the door surface for the 3M tape adhesive.
- > Allow two minutes for area to dry prior to attaching the sign.

STEP 2

- > Peel the red 3M liner just before application.
- > Use a ruler or level as a horizontal guide and place sign gently onto surface first.
- > Once in place, press firmly (approx. 15psi of pressure) for permanent adhesion.


For more information contact us on:

P: 07 3393 9644



E: sales@tactiletaxi.com.au

F: 07 3393 9722

W: www.tactiletaxi.com.au

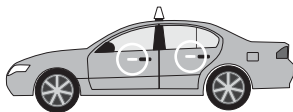

Standard Door Handles: place 25mm or 1 inch forward of the handles.
Sliding Door Handles: underneath and forward of centre.

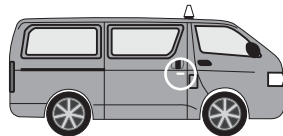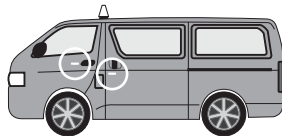

As recommended by Vision Australia

Removal Guide

- > Use strong wire (picture hanging wire) wrapped around two blocks of wood as handles.
- > Pull the wire along the back of the sign and away from the surface of the taxi.
- > Use the recommended Scotch Brand 700 Adhesive Cleaner and Solvent if tape does not peel off easily.
- > Use step 1 and step 2 for re-application.

© Tactile Taxi Signs Pty Ltd